



INSTALLATION OF TRANSMITTER PROTECTOR S/3 AND S/2

After installing the transmitter, adjust and screw the protective cover to the wall using the plugs and screws provided..

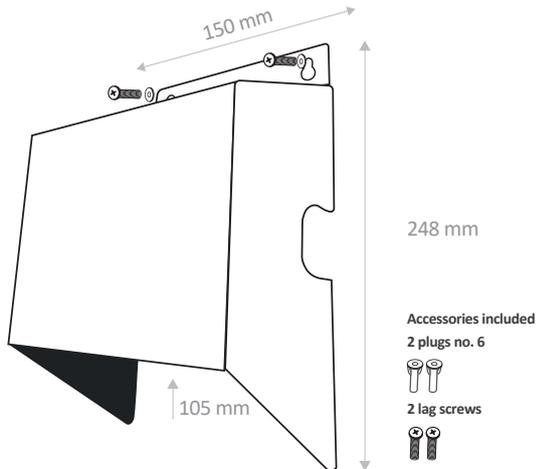

- AISI 304 stainless steel sheet, thickness 1.5 mm
- Weight 860 g

Maintenance: the accessory allows operational checks and sensor calibrations to be carried out without having to remove the protector.

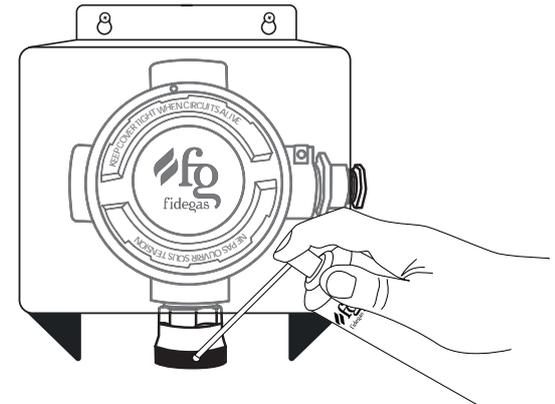

Replacement of spare part: to replace with a new spare part, loosen the lag screws so that the guard can be slid off to access the gas transmitter.